
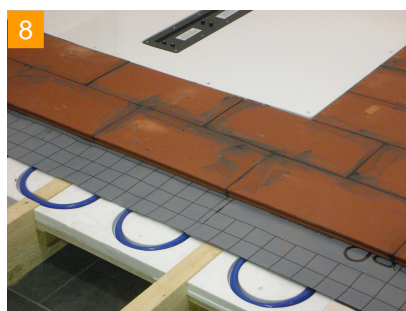


Wet room floor system

Installation Guide (Between Joist)

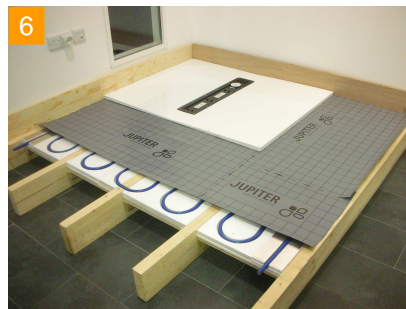

- 1 Begin by fixing the sheet ply on support battens ensuring that the ply is 30mm below the top of the joists. The trap requires the ply to be mounted flush with the joists. Make the raised ply the same length as the linear gully.
- 2 Begin installing the IDEAL heating panels using 3 pipe runs between the joists (400 centre joists).
- 3 Continue by installing all the panels, either as per supplied layout or simply by installing as much pipe layout as possible.
- 4 Press in heating pipe and notch the joists where the pipe has to cross over
- 5 Install Wet Dec floor element and before screwing down to joists slide steel sheet partly underneath to act as extra support .
- 6 JUPITER system foil can be then unrolled over the remaining exposed heating system. This protects the heating system from the Screed Replacement Tile adhesive.
- 7 Screed Replacement Tiles are then installed around the Wet Dec as per published guidelines.
- 8 At 20mm the Screed Replacement Tile system is 2mm lower than the Wet Dec.
- 9 The waterproofing TileSafe is applied as per suppliers guidelines over the Screed Replacement Tiles and the WetDec. This partially overcomes the 2mm step.
- 10 Finally, the finished floor tiles are installed and the flexible tile adhesive makes up the final step between to the systems.

For further installation information on the WetDec solution contact CCL on 01256 763 100 or visit www.tile-safe.co.uk